
MD-200 Quick Start Guide

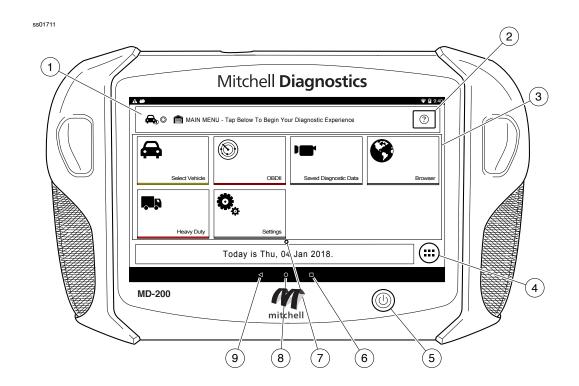

1. Vehicle Identification Window

• Where vehicle information is displayed.

2. Navigation Help button

3. Main Menu Functions

- Select Vehicle allows you to manually choose the vehicle, AutoID to automatically identify the vehicle or enter the VIN.
- OBDII (also referred to as Generic OBDII)
 Provides limited engine control and monitors the diagnostic control network of the vehicle.
- Saved Diagnostic Data allows the user to view previously ran and saved DTC reads, All System DTC scan, and Automated System Test scans and data stream recordings.
- Browser Fast Touch™ sites and internet.
- Heavy Duty allows the user to read Heavy Duty diagnostic information.
- Settings change settings of the tool.

4. Android Applications Button

• Displays the Apps screen

5. Power Button

• Press to power ON hand set or if running press to access menu to: Power Down.

6. Recent apps button

• Opens a list of thumbnail images of currently running apps.

7. Page indicator

• Displays the page currently being displayed.

8. Home Button

• Displays the Main Menu Screen.

9. Back Button

• Returns to the previous screen or option.

MD-200 Quick Start Guide

Safety Precautions

- BEFORE OPERATING THIS TOOL, ALL OPERATORS SHOULD READ AND UNDERSTAND THIS QUICK START GUIDE AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS.
- KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS, CONTACT YOUR OTC REPRESENTATIVE OR DISTRIBUTOR.

A DANGER:

When an engine is operating, keep the service area well ventilated or attach a building exhaust removal system to the engine exhaust system. Engines produce carbon monoxide, an odorless, poisonous gas that causes slower reaction time and can lead to death or serious personal injury.

MARNINGS:

- When working with hydraulic or fuel lines, be careful that liquids under pressure do not escape and create a dangerous condition. Use adequate ventilation and make sure there are no sparks or possibility of sparks that may ignite any vapor.
- Wear an American National Standards Institute (ANSI) Z87.1 approved eye shield when testing or repairing vehicles.
- Objects propelled by whirling engine components or pressurized liquids escaping may cause personal injury.
- Set the parking brake and block the wheels before testing or repairing a vehicle. It is especially important to block the wheels on front-wheel drive vehicles because the parking brake does not hold the drive wheels.
- Do not drive the vehicle and operate the software at the same time.
- Maintain adequate clearance around moving components or belts during testing.
- Moving components and belts can catch loose clothing, body parts, or test equipment and cause serious personal injury or tool damage.
- Automotive batteries contain sulfuric acid and produce explosive gases that can result in serious injury ignition of gases, keep lit cigarettes, sparks, flames, and other ignition sources away from the battery at all times.
- Refer to the service manual for the vehicle being serviced.
 Adhere to all diagnostic procedures and precautions. Failure
 to do so could result in personal injury or otherwise unneeded
 repairs.
- Use only specially designed replacement parts (brake hoses and lines) for ABS equipped vehicles.
- After bleeding the brake system, check the brake pedal for excessive travel or a "spongy" feel. Bleed again if either condition is present.
- When installing transmitting devices (Citizen Band radio, telephone, etc) on ABS-equipped vehicles, do not locate the antenna near the ABS control unit or any other control unit.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- To reduce risk of injury, charge only Bosch Automotive Service Solutions, Inc. supplied rechargeable batteries for the MD-200 product with the supplied charger. Other types of batteries may burst causing injury to persons and property damage.
- Use of an attachment not recommended or sold by the battery charger manufacturer may result in fire, electric hock, or personal injury.
- Do not operate the tool with a damaged cord or connector. Replace damaged cords and connectors immediately.
- Do not operate the charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Take the charger to a qualified service person.
- Do not disassemble the charger. Take the charger to a qualified service person if service or repair is necessary. Incorrect reassembly may result in electric shock or fire. Unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
- To prevent possible hearing damage, avoid using the tool at high volume levels for long periods.
- Do not expose tool or charger to rain, moisture, or snow.
- Verify that cords are located where they will not be stepped on, tripped over, or otherwise become a safety hazard or subjected to damage or stress.
- Use only batteries that are approved for use with this tool. Use of other types may increase the risk of fire or explosion.
- Do not carry a battery in your pocket, purse, or other container where metal objects (such as car keys or paper clips) could short-circuit the battery terminals. The resulting excessive current flow can cause extremely high temperatures and may result in damage to the battery pack or cause fire or burns.
- The battery poses a burn hazard if you handle it improperly.
 Do not disassemble it. Handle a damaged or leaking battery with extreme care. If the battery is damaged, electrolyte may leak from the cells and may cause personal injury.
- Keep the battery away from children.
- Do not store or leave your tool or battery near a heat source such as a radiator, fireplace, stove, electric heater, or other heat-generating appliance or otherwise expose it to temperatures in excess of 60°C (140°F). When heated to excessive temperatures, battery cells could explode or vent, causing personal injury or risk of fire.
- Do not dispose of your tool's battery in a fire or with normal household waste. Battery cells may explode. Discard a used battery according to the manufacturer's instructions or contact your local waste disposal agency for disposal instructions. Dispose of a spent or damaged battery promptly.

CAUTION:

- To avoid damage or generation of false data, make sure the vehicle battery is fully charged and the connection to the vehicle Data Link Connector (DLC) is clean and secure.
- Do not place the tool on the distributor of a vehicle. Strong electromagnetic interference can damage the tool.
- Never disconnect or reconnect any electrical connector while the ignition is on. Powertrain Control Module (PCM) damage may result.


MD-200 Quick Start Guide

Setup

1. Battery Charging.

Connect the handset to AC power and fully charge the battery.

ss01714

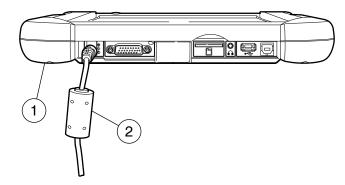

1. Handset

2. AC Power cord

When the handset is turned on, the level of battery charge is indicated in the upper right corner of the screen.

NOTE: The tool can be used while charging. The battery can also be charged using the 15 volt power supply provided with the kit.

Battery Life Tips

The Handset is an Android based touch screen tablet. The battery life icon shows charge level. The scan tool lets you know how much battery life is left by viewing the icon located at the top right of the home screen. Like all Android devices, there are tips to help extend or maximize battery life.

When not actively being used, the screen will timeout and the scan tool will go into the hibernation. The user can set the length of delay between the last screen touch and automatic screen timeout (dim and lock). From the Home screen, touch the Android App button - Settings - Display.

Select Screen timeout, then select the length of time from the last screen touch and automatic screen timeout.

To use again, press the power button to wake the tool up. This will allow maximum run time, while not limiting productivity.


When the tool is powered up, even if it is not being actively used, Wi-Fi and Bluetooth radios as well as all other necessary hardware are still being powered. Battery life is comparable to similar devices when in this state.

Note: It is recommended to keep the scan tool plugged into power supply when not being used.

Software Updates: Periodically, updates will become available and the user will be notified through a message on the screen. To receive updates automatically, connect to Wi-Fi and leave scan tool on overnight.

Note: Scan Tool will download updates automatically when connected to the internet. When download is complete, the user will be informed with a pop up screen. To install an update, the scan tool must be connected to the AC power adapter, over 50% battery life and not connected to a vehicles DLC.

2. Press the power button to turn on the handset.

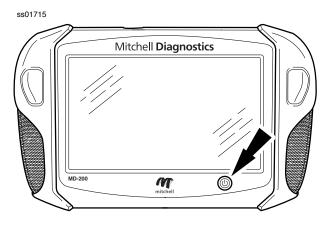

Power Button Functions


The power button has four functions

- a. ON: Press the power button to turn the handset on.
- b. OFF: Press and release the power button.
 A pop up window will appear to shut down the handset.
- c. ON: If the screen times out or is in standby mode, press and release the power button to wake up the handset. Turn ON: With tool off, press to turn ON
- d. OFF: Press the power button and hold for 5 seconds to turn the handset off completely (not recommended).


Mitchell Diagnostics Mitchell Diagnostics

MD-200 Quick Start Guide

3. Select a Language

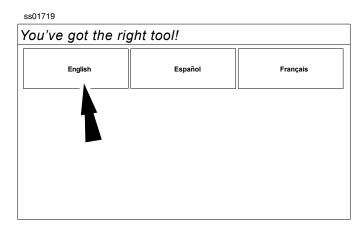


4. Register the tool, begin the trial period, or run the tool in demo mode.

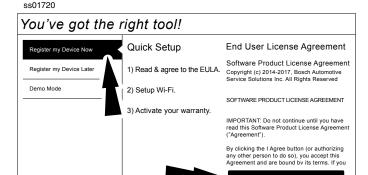

Note: Wi-Fi Must be ON. If Wi-Fi is OFF slide the Wi-Fi switch to the ON position and follow the prompts on the screen.


5. Connect the VCI to the vehicle.

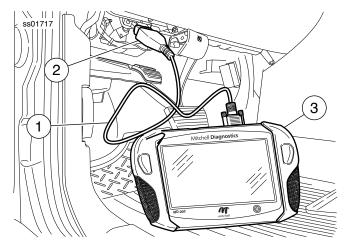

- 1. OBDII/DLC Cable
- 2. DLC
- 3. Handset

6. Connect to the internet.

a. Enable Wi-Fi and select Next

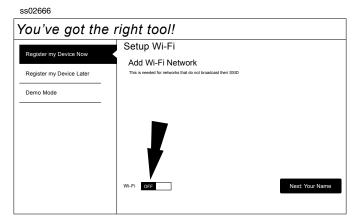


- b. Select a network and select Next
- c. If a Network password is required the Android Wi-Fi screen will be displayed. Follow the prompts on the screen.
- d. If an internet connection could not be established, follow the prompts on the screen and try again.

MD-200 Quick Start Guide


7. How to Power Off MD-200

a. Press and release the power button

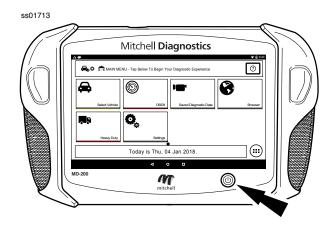

b. Select OK. The tool will now shutdown.

ss02856

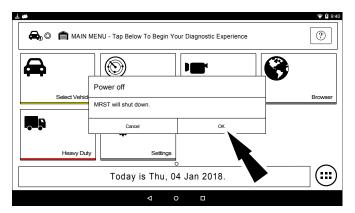

Note: When switching vehicles, it is best to return to the home screen before disconnecting the VCI from the vehicle to avoid communication errors.


Selecting Vehicle

Allows the user to enter a new vehicle or view Recent Vehicles previously selected. Select the "Select Vehicle" button then enter a vehicle one of four ways:

- Select AutoID to start to automatically detect the vehicle.
- 2. Select Manual Selection manually enter information.
 - Year
 - Make
 - Model
 - Engine


- 3. Select Recent Vehicles to select from a list of previously selected vehicles.
- 4. Enter VIN in search by VIN field.

ss02689

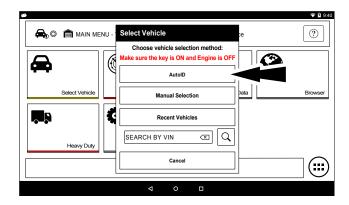

Diagnostic Functions

After selecting a vehicle the user will be able to begin using diagnostic functions on the vehicle.

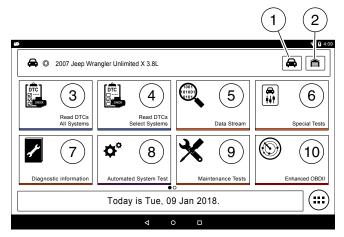

- 1. Select Vehicle button Short cut to the select vehicle screen
- 2. Home Button

Short cut to the Main Menu

Diagnostic Function PAGE 1

3. Read DTCs All Systems
The Read DTCs All Systems will scan all available controllers on the selected vehicle.

- 4. Read DTCs Select Systems
 The Read DTCs Select Systems will scan selected controller on the vehicle.
- 5. Data Stream
 The data stream function shows live sensor and

MD-200 Quick Start Guide

solenoid data streaming from the vehicle ECU (electronic control unit).

6. Special Tests

Depending on the vehicle and controller selected, special tests are available.

7. Diagnostic Information

Diagnostic Information provides diagnostic, repair, and reset information for the selected vehicle.

8. Automatic System Test

The Automated System Test (AST) will scan all available controllers on the selected vehicle for Modes 1-7.

9. Maintenance Tests

Maintenance Tests provide a way for specific systems to be recalibrated or reset after service.

10. Enhanced OBDII

Provides limited engine control and monitors the diagnostic control network of the vehicle.

Diagnostic Function PAGE 2 (Not shown)

11. Saved Diagnostic Data

The Saved Diagnostic Data functions allows the capability to recall previously run tests and Data Stream Records.

12. Browser

An internet browser window is available for direct internet access.

13. Settings

Settings allow the user to make adjustments to the tool.


Features

AutoDetect®


The new user interface utilizes graphic "badges" to illustrate when critical information is found.

AutoDetect® automatically detects vehicle-specific solutions and graphically alerts the user of on-tool or web-based repair information found. To use the Code To Fix® feature, press the Diagnostic Trouble Code to launch the DTC Info screen for access to exclusive experienced-based fixes and repair information for that specific vehicle and DTC.

ss02753

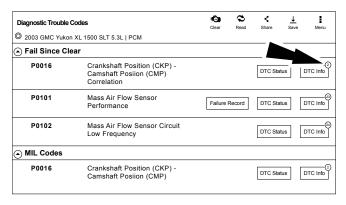

ss02754

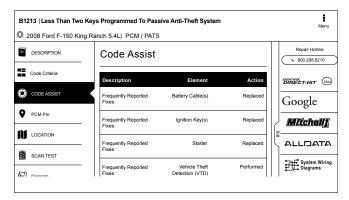

AutoID®

- Automatically selects the vehicle using OBD II Mode 9.
- Identifies vehicles to quickly set up year, make, model, and engine.
- way to select a vehicle. AutoID retrieves the VIN number from the vehicle's on-board computer for OEM's that support the function. The function used is Mode 9 Vehicle Information which is one of the 10 modes of the OBD II regulation. As illustrated below, Mode 9's support of AutoID varies by OEM and model year. Very few OEM's support Mode 9 VIN from 1996–2000. Use the information below to understand when Auto ID is best used. 2000–2004—some US vehicles may respond to Mode 9 From 2000–2004 it was only used at the OEMs discretion.

MD-200 Quick Start Guide

- 2005–2007 many US vehicles will respond to Mode 9 From 2000–2007 it was CARB advised, but not required
- 2008–current—virtually all US vehicles are required to respond to Mode 9 OBDII Mode 9 was not ARB required until 2008MY

NAD 200	\circ	1 6		
MD-200	Our	CK ST	art G	uide

OTC Technical Support: (800) 533-6127

Please record and retain this important information:

Part No:	
Serial No:	
Purchase Date:	